

IMPORTANT SAFEGUARDS

To guard against injury, basic safety precautions should be observed including, but not limited to the following;

- Do not install or store the feeder where it will be exposed to extreme hot or cold temperatures.
- Keep out of reach of children or pets. This appliance should not be used by children or infirm persons without supervision.
- Do not attempt to repair the feeder yourself. Return to an authorized dealer or place of purchase if a fault occurs (regular maintenance is not considered repair and is required by user).

LIMITED WARRANTY

This product is warranted to the initial purchaser to be free of defects in materials and workmanship at the time of initial purchase and for a period of 1 year for the PondMAX Automatic Fish Feeder. Certain parts are consumable and must be replaced regularly as part of the ongoing product maintenance and are not covered by this Warranty. These parts are primarily the batteries that are required to function correctly. In the event this product malfunctions within 1 year from the date of purchase, the sole obligation of PondMAX USA (hereinafter referred to as PondMAX™) will be to repair the unit or replace with an equivalent new or factory refurbished unit at PondMAX's discretion, subject to the following conditions:

- The malfunction is proved attributable to a defect in materials or workmanship, including repairs performed under this warranty. Malfunction for any other reason-including but not limited to misuse, negligence, accident, or tampering with parts, or improper installation-will not be remedied under this warranty.
- PondMAX™ specifically does not guarantee chemical compatibility, and expressly does not warrant units from any problems caused by chemical attack.
- All warranty repairs must be performed by PondMAX™ or a PondMAX™ authorized company.
- Purchaser must retain the purchase receipt and present it with this certificate as proof of ownership and entitlement to warranty repairs. Unauthorized repairs will not be compensated by PondMAX™, and are not the responsibility

of PondMAX™, and if such repairs damage the product, such damages are not remedied under this warranty.

- Purchaser shall bear all shipping, packing and insurance costs and all other costs, excluding labor and parts necessary to effectuate repairs under this warranty.
- This warranty is in lieu of all other express warranties which now or hereafter might otherwise arise with respect to this product. Any and all limited warranties, including the warranties of merchantability and fitness for particular purpose, shall have no greater duration than the duration period of the express written warranty applicable to this product, and shall terminate automatically the expiration of such duration period. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. No action shall be brought for breach of any implied or express warranty after one year subsequent to the expiration of the duration period of the express written warranty.
- Incidental and consequential damages caused by malfunction, defect, or otherwise, and with respect to breach of any express or implied warranty, are not the responsibility of PondMAX™, and, to the extent permitted by law, are hereby excluded for property damage, loss of livestock and, to the extent not unconscionable, for personal injury damage. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- This warranty does not apply to any malfunction arising out of any application of this product other than normal use, unless such application is upon request specifically approved in writing by PondMAX™.
- The provisions of this warranty are severable and if any provision shall be deemed invalid, the remaining provisions shall remain in full force and effect.
- Rights under this warranty are not assignable without the express prior consent in writing by PondMAX™ and, regardless of the terms of such consent in writing, such assignee shall have no greater rights than his assignor had against PondMAX™.
- To facilitate Warranty Registration please complete the enclosed Warranty Registration card and return: by mail to PondMAX USA, PO.Box 341, San Leandro, CA 94577 or by email to info@pondmax.com. Customer service can be reached by phone toll free 888.868.1185.

E. &O. E.



AUTOMATIC FISH FEEDER



INSTRUCTION MANUAL

PONDMAX USA

P.O. Box 341
San Leandro, CA 94577

Toll Free 888.868.1185
email: info@pondmax.com
www.pondmax.com

PondMAX

AUTOMATIC FISH FEEDER

AUTOMATIC FISH FEEDER	
FEEDING	UP TO 6 TIMES A DAY
CAPACITY	2LB VOLUME CONTAINER
FOOD SIZE	ANY FOOD UP TO 8MM PELLET SIZE
ENERGY SOURCE	POWERED BY 2 X 1.5V AA BATTERIES

Congratulations on your purchase of this automatic fish feeder for your pond.

DESCRIPTIONS & FEATURES

Your Pondmax Automatic Fish Feeder has been manufactured with advanced technology to provide you with the best quality automatic feeder for your fish. Regular fish feeding is one key to healthy fish. With the Pondmax Automatic Fish Feeder you can feed automatically 1-6 times per day and the food quantity can be adjusted according to the quantity of fish in your pond.

- Large 2LB capacity


INSTALLATION

1. Unpack your automatic feeder and make sure all components have been included.
2. Open the battery cover and install two AA 1.5v batteries (not included). Do not use rechargeable batteries. See the symbols + and - for the correct way of installation of the batteries. Expected battery life: under testing conditions the feeder works for 2 months on 1 set of batteries, however, the time will depend on outside temperatures, number of

feedings per day, and by quality of batteries.

3. Open the side cover and set the time by turning the dial clockwise until the local time is in line with the black indicator.
4. Set the feeding times and frequency by pushing the green pins on the timer disk outwards for a feeding. Reset by pushing the green pin inwards. You can have up to 6 feeds every day. Close the side cover.
5. Open the opposite side cover and remove the food container by holding your thumb on the food container so it is fixed, then turn the black center knob anti-clockwise to unscrew. Take out the food container and remove the lid. Make sure the container is dry and clean. Fill it with food (do not overfill) and place it back in the unit with the cover marked 'UP' facing upwards.
6. Set the food quantity per feed by moving the dose tab on the top of the food container to make the opening bigger or smaller. Test the set food quantity a few times, before leaving the feeder to work on its own, by turning the timer disk clockwise.

7. Once the feeder has been set, ensure both cover flaps are securely closed.
8. To set up with mounting frame supplied, slide mounting bracket onto the feeder just under the handle. Assemble poles together with the joiners and the corner bracket provided to form an even L shape. Put the square end cap onto one end of the frame and the garden stake on the other end. Unwind the knob on the mounting bracket wide enough for the square end cap to fit in. Insert the frame with the end cap into the bracket and tighten the knob on the mounting bracket to hold the bracket onto the frame.
9. To set up feeder outside of pond, attach the mounting bracket onto the end of the feeder at the bottom. Fix the mounting bracket onto the desired surface with 2 self tapping screws.
10. Now your fish can enjoy being fed the right amount at the right time.

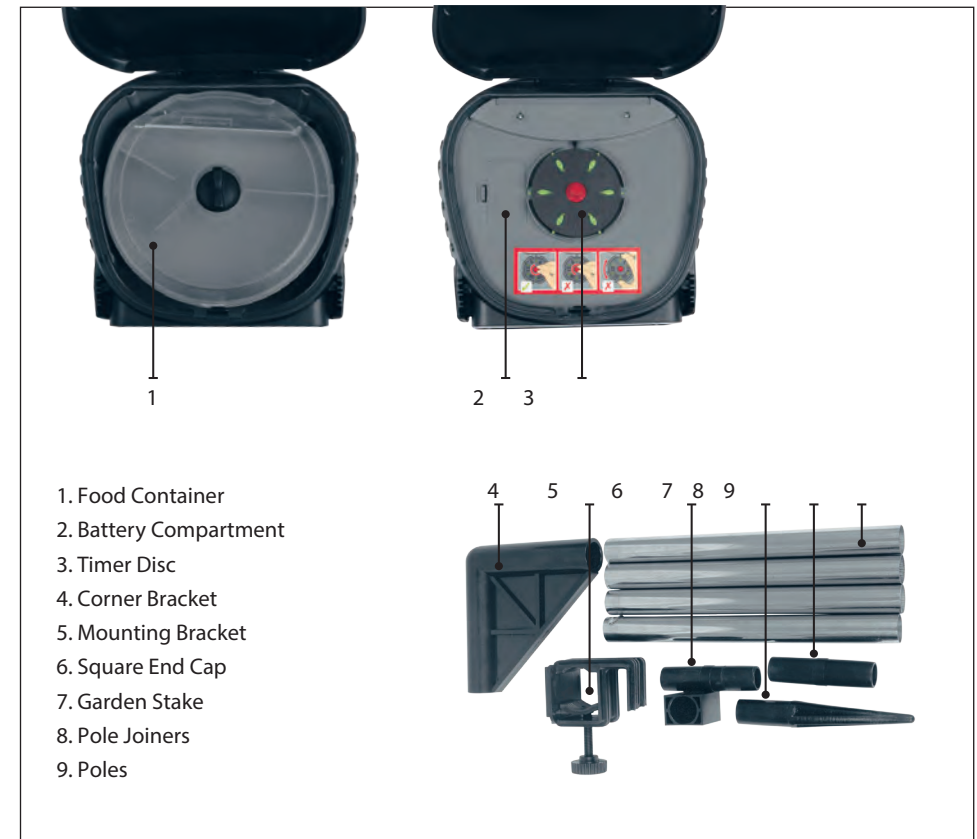

1. Food Container
2. Battery Compartment
3. Timer Disc
4. Corner Bracket
5. Mounting Bracket
6. Square End Cap
7. Garden Stake
8. Pole Joiners
9. Poles