

HOW TO USE REPROGRAM THE PONDMAX LIGHT REMOTE:

Pairing a Color Changing remote to a controller:

1. Disconnect the remote control receiver device from the power supply.
2. Connect a light to the output of the controller.
3. Press and hold the on/off button on RF remote, whilst holding down the button then plug the remote control receiver device into the 12V power supply.
4. Continue to press and hold the on/off button until the light flashes 3 times.
5. After 3 seconds, release the on/off button.
6. Test the remote to ensure it is working correctly.

Please note that when the lock button  is pressed, no other buttons can be used.

Pairing a Warm White remote to a controller:

1. Disconnect the remote control receiver device from the power supply.
2. Connect a light to the output of the controller.
3. Reconnect the remote control receiver device to the power supply and immediately press the on/off button on the remote.
4. Continue to press and hold the on/off button until the light flashes 3 times.
5. After the light flashes, release the on/off arrow button.
6. Test the remote to ensure it is working correctly.

info@pondmax.com

888.868.1185